



ASSEMBLING INSTRUCTION

STAGE 02 組裝副駕駛座椅



STEP 01

準備零件 2-D、2-I 及 2-P，如圖所示。
Prepare parts 2-D, 2-I, and 2-P as shown.




STEP 02

將 2-D 黏貼至 2-P。
Glue 2-D to 2-P.



STEP 03

將另一個 2-D 黏貼至另一側。將 2-I 黏貼至中央凹槽內。
Glue the remaining part 2-D to the opposite side. Glue 2-I into the central recess.

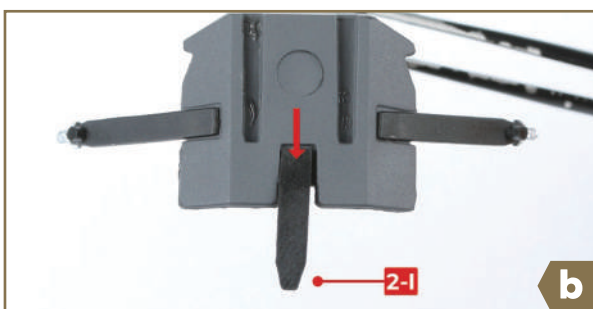




STEP 04

依照紅線標示位置，在 2-N 上塗抹少量膠水。
Apply a little glue to 2-N as shown by the red lines.



STEP 05

將 2-P 固定至指定位置。
Fix 2-P in place.

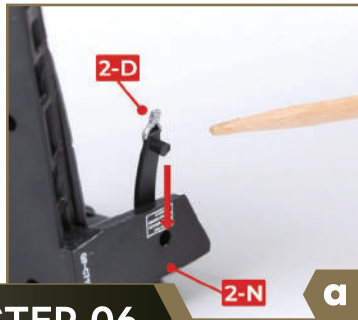

STEP 06

將 2-D 黏貼至 2-N。
Glue 2-D to 2-N.



b



STEP 07

在另一側重複相同步驟。
Repeat on the opposite side.



STEP 08

將 2-Q 穿過圖示中的開口。
Push 2-Q through the opening as shown.



STEP 09

將 2-Q 黏貼至 2-N。
Glue 2-Q to 2-N.



b




STEP 10

將 2-Q 的另一端黏貼固定。
Glue the other ends of 2-Q into place.



STEP 11

將 2-K 黏貼至 2-P。將 2-I 黏貼至 2-P。
Glue 2-K to 2-P. Glue 2-I to 2-P.

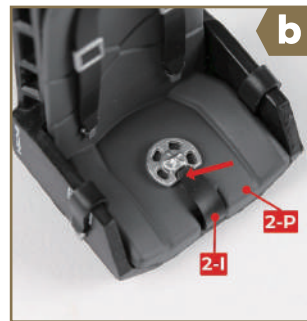

b

組裝說明 ASSEMBLING INSTRUCTION



STEP 12

將 2-L 黏貼後壓入 2-P。
Glue and push 2-L onto 2-P.



STEP 13

依照圖示安裝 2-R。
Attach 2-R as shown.



STEP 14

在另一側安裝 2-S。
Attach 2-S to the opposite side.



STEP 15

黏貼並安裝 2-C。
Glue and attach 2-C.



b



STEP 16

依照圖示位置黏貼 2-A 並固定。
接著黏貼並安裝 2-B。
Glue 2-A as indicated and fix in place.
Glue and attach 2-B.




b



STEP 17

安裝 2-E 與 2-F，並確認其方向朝向內側。
Attach 2-E and 2-F, checking that they point inwards.

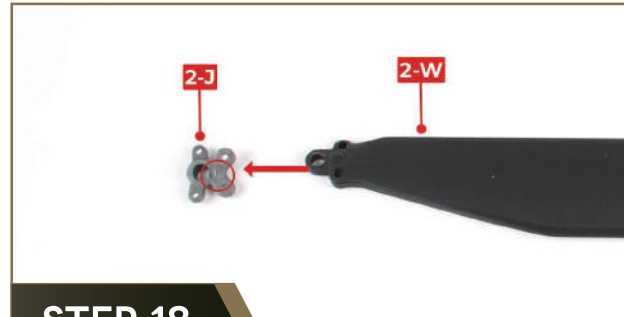

STEP 18

開始組裝主旋翼葉片。將 2-W 放置於 2-J 上。
請使用標示有「1」的 2-J 零件，如圖所示。

You will now start building the main rotor blade.
Place 2-W onto 2-J. 2-J is marked with a '1' as indicated.




STEP 19

將 2-H 放置於上方。
Place 2-H on top.




STEP 20

將 2 個 2-U 穿過 2-H 與 2-J。
Push 2x 2-U through 2-H and 2-J.

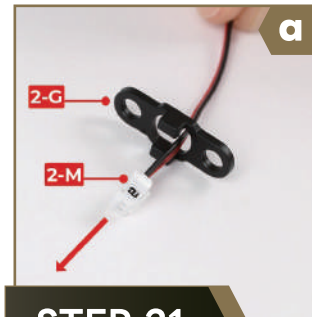

STEP 21

接著安裝尾旋翼驅動組件。
將 2-M 穿過 2-G，並完全穿出另一端。
You will now attach the tail rotor.
Thread 2-M through 2-G all the way through.

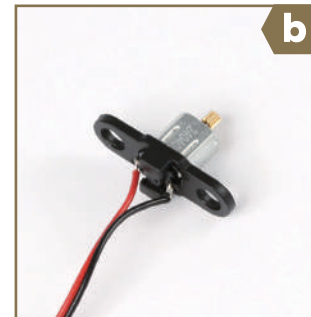

STEP 22

依照圖示安裝 2-T。
Attach 2-T as shown.



STEP 23

將本步驟組件安裝至第 1 期
STEP 06 所完成的組件上。
Place the assembly from the previous
step onto the assembly from stage 01,
step 6.



STEP 24

使用 2 顆 BM 螺絲固定。
Screw the parts together using 2x BM.



STEP 25


取出尾旋翼組件(第 1 期STEP 15零件)並壓入指定位置。
壓入時請一邊旋轉，以確保尾旋翼與馬達正確接合。
Take the tail rotor assembly (stage 01, step 15) and push it into place.
Twist as you press to make sure it connects with the motor.

插入電池測試時，若動作不順，可
用砂紙將這根轉軸磨細；另外提醒
尾翼請勿裝到底，以避免影響旋轉
順暢。



STEP 26

將 2 顆 AAA 電池裝入 2-V。接上 B 線材。
旋翼應開始轉動。測試完成後請拔除線材。
Insert 2x AAA batteries into 2-V. Connect cable B. The
rotors should spin. Disconnect the cable after testing.

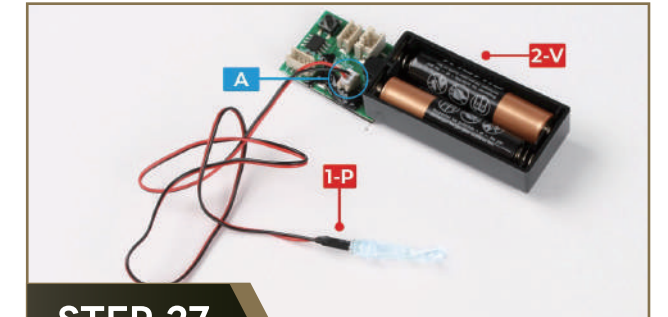

STEP 27

將 1-P(A 線材)接至 2-V。LED 指示燈應亮起。
測試完成後請拔除線材，並將電池自 2-V 取出。
Connect 1-P (cable A) to 2-V. The LED should light up.
Disconnect the cable then remove the batteries from 2-V.

STAGE COMPLETE

